
CURVED SCREEN

① IMPORTANT

- Handle with care
- The screen requires 2 people to carry and install.
- Check for cables and pipework before drilling the wall.
- Use safety goggles when drilling.
- Use safety goggles when handling the glass.
- Keep all small components away from children.

Please notify the retailer of any damages or faults. The manufacturer cannot be held liable for any installation costs that may arise from a damaged or faulty product being installed.

② Check that your bath has been installed correctly to the manufacturer's guidelines. (Bath not supplied)

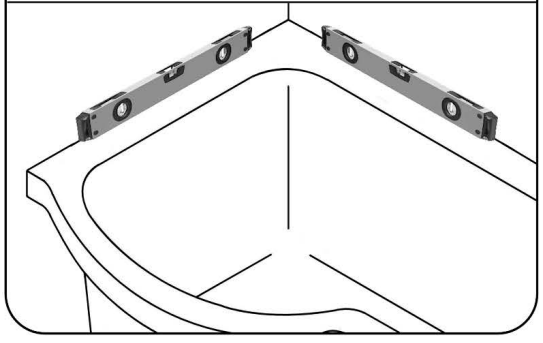

PAPER
Widely Recycled

③ Tools Required (Not supplied)

Spirit Level



Pencil




Screwdriver



Silicone Gun & Sealant




Tap Measure

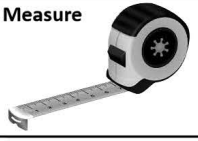


Power Drill & Suitable Bits




④

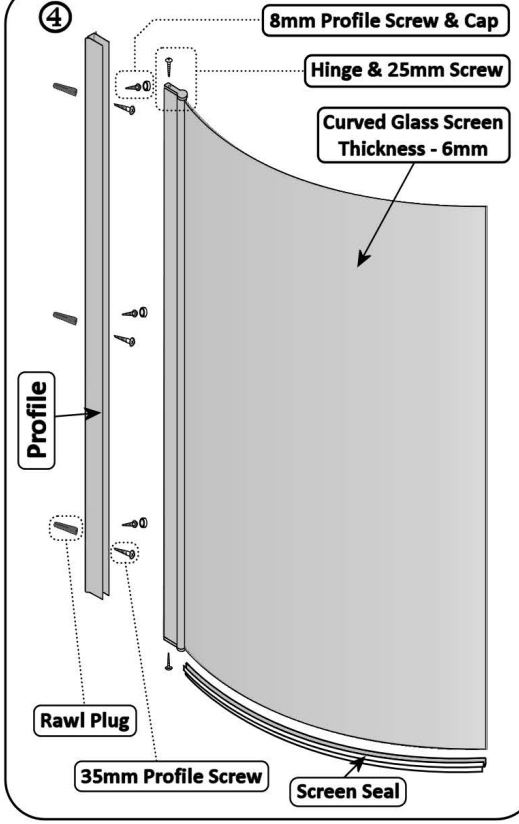


⑤ Dry fit screen to find out best position of wall profile.

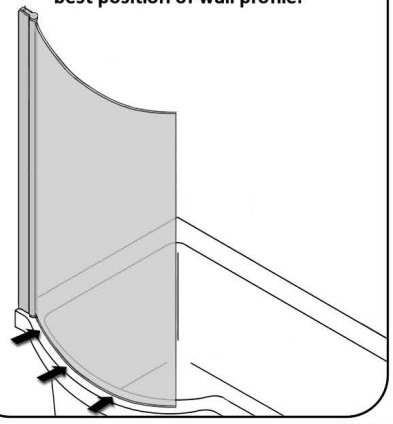


⑥

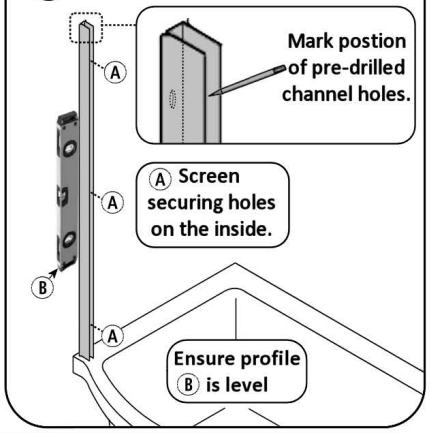

⑦ Fittings supplied for **solid walls** only!! Ensure that correct fittings are used for the wall type.

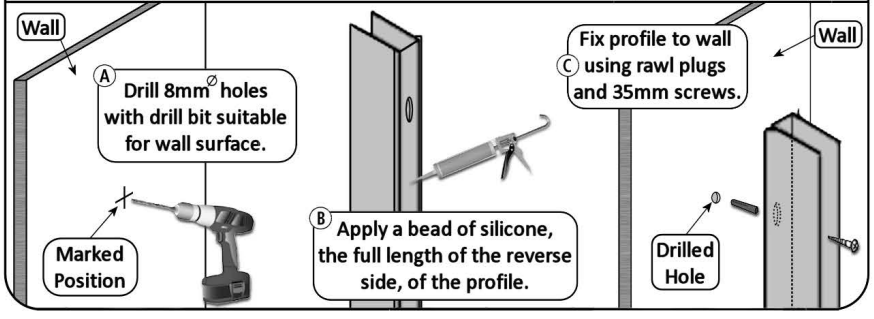

⑧

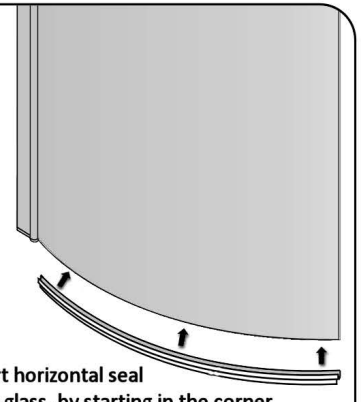

Insert horizontal seal onto glass, by starting in the corner and work the seal across the curve.

⑨ Insert glass screen into the profile and adjust to suit. Drill through pre-drilled holes using a 3mm∅ bit and secure with 8mm screws and screw caps.

