


INSTALLATION OF 2 IN 1 WC & BASIN

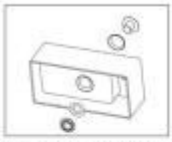

Step 1: Place and fix the waste and washer.

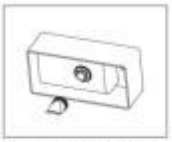

Step 2: Fit the Silicone sleeve on the bottom of the waste.

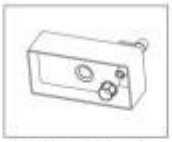

Step 3: Place the tap and lightly screw the fixing nut.




Step 4: Connect hot & cold water hose to the tap and connect the other end to outlet of the cistern.





INSTALLATION OF WASH BASIN

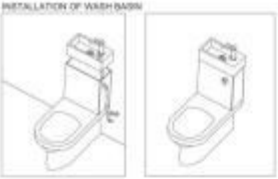


Note: During installation, please ensure there is enough distance between the float of the inlet valve and the hoses, make sure there is no resistance to the normal operation of the inlet valve.

Combi De-luxe



POT955CM

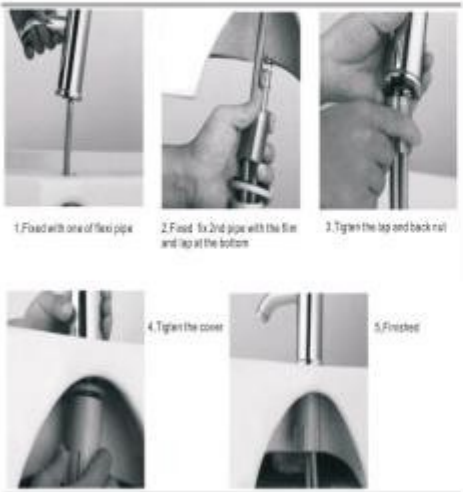

1.Fixed with one of flexi pipe

2.Fixed fix 2nd pipe with the fix and lap at the bottom

3.Tighten the tap and back nut

4.Tighten the cover

5.Finished

Basin waste installation instruction



1. Fixed the fllm first and put in the hole

2.Fixed another film at the bottom

3.Tighten the screw and finished